WeatherMation LIVE Dashboard Reports

Version 2.2 20/09/2022



Environdata Australia Pty Ltd 42-44 Percy Street Warwick Queensland 4370 Australia Phone: (07) 4661 4699 Fax: (07) 4661 2485 International Phone: +61 7 4661 4699 International Fax: +61 7 4661 2485 Email: sales@environdata.com.au

http://www.environdata.com.au

Material in this handbook is Copyright. All rights reserved by the publishers. No reproduction without the prior permission of the publishers.



Table of Contents

Introd	luction	2
1.	Dashboard Reports - Specific Menu Options	3
2.	Weather Dashboard	4
3.	Weather Dashboard Setup	5

Introduction

Environdata's Weather Mation software has been developed to download, display and respond to the weather data from your weather stations, automatically.

Weather Mation's Reports Module provides your users with extra tools to analyse all of your weather data from each of your connected weather stations. This data is on a Webpage to be accessed via the internet on any browser from a computer.

Using the System

Go to <u>www.weathermation.net.au</u>

You will see the Login Page – please enter your User Name and Password that were provided to you.

You can click the "Remember Me" checkbox to remember your login details – this will mean in future; you are automatically logged into the system. Please note you will need to have cookies enabled in your browser for this to work.

Click on the Login button to access the system

(If you need to change your password, click on the Reset Password button)

Uve Data • WeatherMation	Historical Data •	Forecast Data	Tools •	Guides 🕨	Help	Login	Weather Mation 100
User Name Password	Remen	nber Me Login Reset Password					

1. Dashboard Reports - Specific Menu Options

- Live Data
 - Weather Dashboard displays a customized report based on Current Readings Graphs, Historical Data Graphs or Current Values from your weather station. You can include multiple weather stations on 1 report. This is ONLY available if you have purchased the Reports Module.
- Tools
 - Screen Alerts Setup Setup different coloured Alerts used on the Current Readings Page and the Weather Dashboard. This is ONLY available if you have bought the Alerts Module and if you have configuration access.
 Refer to WMA_020_Screen_Alerts.pdf for details on how to Setup Screen Alerts.
 - Weather Dashboard Setup customize your Weather Dashboard Reports. This is ONLY available if you have bought the Reports Module and if you have configuration access.



2. Weather Dashboard

Using the Weather Dashboard Page


If your user has permission to do configuration, they can setup different Dashboard Reports. Each report can have up to 24 Graphs, Wind Compasses or Latest Values – based on Current or Historical Data. This is displayed in 6 rows of 4 columns each.

You can display multiple sensors from multiple weather stations on each Dashboard Report. *Refer to Section 3 on how to customize and save these Dashboard Reports.*

If you have more than one Weather Dashboard Report set up, you can select which Report to display by clicking the arrow on the drop-down box and selecting your chosen Report.

Notes:

You may have the optional Alerts & Notifications Module and have On-Screen Alerts setup. E.g. Air Temperature in the below image has a yellow background to indicate the temperature has reached the settings to display a yellow background. 7 settings per sensor are possible. *Refer to WMA_020_Screen_Alerts.pdf* for details on how to Setup Screen Alerts.

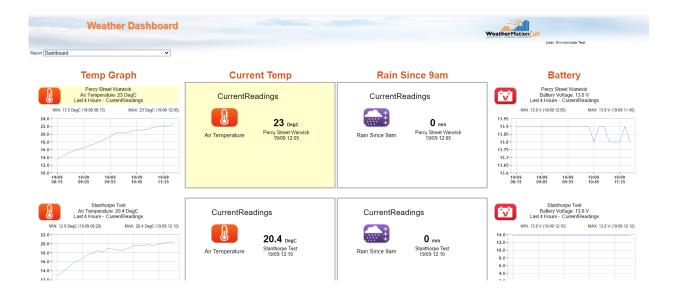

3. Weather Dashboard Setup

Weather Dashboard Setup Screen

The Weather Dashboard Setup Screen allows you to setup which sensors from which weather station you would like to be displayed on Weather Dashboard Report. You can also select in which order they will appear and what type of graph you'd like for them. Only a user assigned layout setup access will be able to make these changes.

You can create and save multiple Dashboard Reports.

Creating a NEW Weather Dashboard Report

Enter a Name for your New Report in the Report Name field.

Login Required to Run this Report:

- 1. If you have chosen to have your sites secure and require your users to login to access your weather stations, then this field should be ticked in order to keep your data secure.
- 2. If you have chosen to NOT have a login for your weather stations and they are publicly viewable, then leave this box un-ticked to make this report publicly viewable or tick this box to make the report secure and require a login to view.

You can enter a Column Heading for each of the 4 columns if you want to group the columns e.g. Each column could be a specific Weather Station if you have 4 stations. Or Column 1 can be Air Temperature Column 2 Rainfall etc and then your can list 6 different stations below them.

	Weather Dashb	our a courte			Weather Mation
port port Name	Create a New Report - Create a New Report - Login Required to Run this Report				To have the required Pre-Specified Data available, the follow needs to be recorded in your Logger's 5, 10 or 15 Minute M MIN and MAX Air Temp, MAX Peak Wind Gust, TOTAL Rain
ilumn Heading		Column Heading		Column Heading	Contact Environdata to add this to your system Column Heading
	- Select a Weather Station - 🗸	Weather Station - Select a Weather Station -	~	Weather Station - Veather Station -	Weather Station - Select a Weather Station -
emory	×	Memory Sensor	~	Memory V Sensor V	Memory V Sensor V
pe of Display	×	Type of Display	~	Type of Display	Sensor V Type of Display V
ather Station	- Select a Weather Station -	Weather Station - Select a Weather Station -	~	Weather Station - Select a Weather Station -	Weather Station - Select a Weather Station -
emory		Memory	~	Memory V	Memory Y
nsor		Sensor	~	Sensor 🗸	Sensor V
pe of Display	~	Type of Display	~	Type of Display 🔽 🗸	Type of Display
ather Station	- Select a Weather Station -	Weather Station - Select a Weather Station -	~	Weather Station - Select a Weather Station -	Weather Station - Select a Weather Station -
emory	~	Memory	~	Memory 🗸	Memory V
nsor	`	Sensor	~	Sensor 🗸	Sensor V
pe of Display	~	Type of Display	~	Type of Display	Type of Display
ather Station	- Select a Weather Station - 🗸	Weather Station - Select a Weather Station -	~	Weather Station - Select a Weather Station -	Weather Station - Select a Weather Station -
amory	~	Memory	~	Memory V	Memory V
nsor pe of Display	×	Sensor Type of Display	~	Sensor V Type of Display	Sensor V Type of Display
pe of Display	•	Type or Display	v	Type of Display	Type or Display
	- Select a Weather Station -	Weather Station - Select a Weather Station -	~	Weather Station - Veather Station -	Weather Station - Select a Weather Station -
mory 1sor	×	Memory Sensor	~	Memory V Sensor	Memory V Sensor
nsor be of Display	×	Type of Display	~	Sensor V Type of Display	Sensor V Type of Display
aller Station	- Select a Weather Station -	Weather Station - Select a Weather Station -	~	Weather Station - Select a Weather Station -	Weather Station - Select a Weather Station -
mory	- Select a Weather Station - V	Memory	~	Memory Vealanter Station - V	Memory
	· · · · · · · · · · · · · · · · · · ·	Sensor	~	Sensor V	Sensor V
nsor	×	Type of Display	~	Type of Display	Type of Display

You have the option to display up to 24 items per Dashboard Report, so for each "block":

• If you have more than 1 weather station linked to your company, you can select which weather station's data to display by clicking the arrow on the drop-down box and selecting a different weather station.

Weather Station	- Select a Weather Station -	~
Memory	- Select a Weather Station -	
Sensor	AHLU and DeltaT	
Transformer	New Firmware Test 215	
Type of Display	Office Parkes	
	ST KILDA HARBOUR	

• Select which Memory you'd like to display – Current Data or Historical Data like Daily Summary or Hourly Data etc.

Weather Station	Office Parkes	~
Memory	Current Readings	~
Sensor	Current Readings	
Type of Display	Daily Summary	
Type of Display	Hourly Data	
	10 Min Data	
	Rainfall Intensity	
Weather Station	Pre-Specified Data	
Manager		14

Refer to **Pre-Specified Data** below for more details on how these are setup.

• All Sensors that are AVAILABLE to be selected to be displayed on the Sensor Drop-down box, select one by clicking on it.

Weather Station	Office Parkes	~	Weather Station	Office Parkes	~
Memory	Current Readings	~	Memory	Daily Summary	~
Sensor	86	~	Sensor	MAXIMUM Wind Speed 10m	~
Type of Display	AHLU 86 Air Temperature	*	Type of Display	MAXIMUM Wind Speed 10m AVERAGE Wind Speed 10m	-
	Air Temperature			STDEV Wind Speed 10m	
	AP Temp			AVERAGE Wind Direction 10m	
	Baro Pressure kPa			S-THETA Wind Direction 10m	
	Barometric Pressure			MAXIMUM Peak Wind Gust	
	Battery Voltage			VWSP Inst. Wind Speed	
	Black Globe Temp			VWDIR Inst. Wind Direction	
	Charge Current			MAXIMUM Relative Humidity	
	CHILL HOURS			MINIMUM Relative Humidity	
	Dew Point			AVERAGE Relative Humidity	
	E/-W Wind Sp (VSin)			MAXIMUM Air Temperature	
	Evaporation Rate			MINIMUM Air Temperature	
	Evaporation Total			AVERAGE Air Temperature	
	GDH			TOTAL Rain Gauge	
	Grass Temperature			MAXIMUM Solar Radiation	
	Heat Load Index			AVERAGE Solar Radiation	
	HOURS			MAXIMUM Barometric Pressure	
	Load Current			MINIMUM Barometric Pressure	
	N/-S Wind Sp (VCos)	•		AVERAGE Barometric Pressure	-

• Then select what type of Graph you'd like to display – BAR or LINE or LATEST VALUE. For Wind Direction sensors, you will have an added option to display a COMPASS. (Latest Value will display the last value received from the Weather Station)

		Live Data 🕨	Historical Data 🕨	Forecast Data	Tools 🕨	Guides	• Help	Logout			
	Weather	Dashbo	oard Setu	p						ally a differentiation of the	
										Weather Mation 10	
											User: Environdata Test
Report	0_Dashboard	~							To ha	ve the required Pre-Specified Data av	ailable, the following
Report Name	0_Dashboard								need	s to be recorded in your Logger's 5, 10 and MAX Air Temp, MAX Peak Wind G	or 15 Minute Memory:
	Login Required to Run this Repo	art									
Column Heading			Column Heading			Column Heading			Cont: Column Heading	act Environdata to add this to your sys	tem
Temp			Office			Wind			Stuff		
Weather Station	AHLU and DeltaT	~	Weather Station	Office Parkes	~	Weather Station	AHLU and DeltaT	~	Weather Station	AHLU and DeltaT	~
Memory	Current Readings	~	Memory	Daily Summary	~	Memory	Current Readings	~	Memory	Pre-Specified Data	~
Sensor	Air Temperature	~	Sensor	AVERAGE Air Temperature	~	Sensor	Wind Direction	~	Sensor	Peak Wind Gust	~
Type of Display	Line	~	Type of Display	Line	*	Type of Display	Compass	~	Type of Display	Since Midnight	~
Weather Station	AHLU and DeltaT	~	Weather Station	Office Parkes	~	Weather Station	AHLU and DeltaT	~	Weather Station	AHLU and DeltaT	~
Memory	Pre-Specified Data	~	Memory [Current Readings	*	Memory	Current Readings	~	Memory	Daily Summary	~
Sensor	Air Temperature	~	Sensor	Air Temperature	~	Sensor	Peak Wind Gust	~	Sensor	MINIMUM Battery Voltage	~
Type of Display	Since Midnight	~	Type of Display	Latest Value	~	Type of Display	Latest Value	~	Type of Display	Line	~
Weather Station	- Select a Weather Station -	~	Weather Station	- Select a Weather Station -	~	Weather Station	- Select a Weather Sta	ition - 🗸 👻	Weather Station	- Select a Weather Station -	~
Memory		~	Memory	Current Readings	~	Memory	10 Min Data	~	Memory		~
Sensor		~	Sensor		~	Sensor		~	Sensor		~
Type of Display		~	Type of Display		~	Type of Display		~	Type of Display		~

Once you have selected and setup all the "blocks", click on the Save Report button to save this Dashboard Report.

Pre-Specified Data

We have created certain special Dashboard Reporting options called Pre-Specified data. Currently only specific sensors are included in these special reporting options. When you select Pre-Specified Data from the Memory drop-down box, you'll get the following options

Weather Station	AHLU and DeltaT	~
Memory	Pre-Specified Data	~
Sensor	Air Temperature	~
Type of Display	Air Temperature	
	Peak Wind Gust	
	Rain Gauge	

The Type of Display Options for Pre-Specified Data is below

Weather Station	AHLU and DeltaT	~
Memory	Pre-Specified Data	~
Sensor	Air Temperature	~
Type of Display	Since Midnight	~
	Since Midnight	
	Since 9am	
	Last 2 Hours	
	Last 8 Hours	
	Last 24 Hours	
	Last 5 Days	
	Last 7 Days	
	Last 30 Days	
	Last 365 Days	
	Since Station Installed	

This gives you the option to show the Min and Max Air Temperature over any of these times, The Total Rainfall over these times or the Max Peak Wind Gust over these times.

You can see an example of the Temperature and Rainfall setup on the 1st example in this document.

Deleting a Weather Dashboard Report

N.B. Weather Dashboard reports can be edited or deleted by the original creator, only.

In order to delete a Dashboard Report, select the Dashboard Report clicking the arrow on the drop-down box and selecting the Report.

Then click the Delete Report button.

Editing/Changing a Weather Dashboard Report

N.B. Weather Dashboard reports can be edited or deleted by the original creator, only.

In order to edit a Dashboard Report, select the Dashboard Report clicking the arrow on the drop-down box and selecting the Report.

If you'd like to make changes to the Dashboard Report and save it with a NEW Name, enter a NEW Name in the Report Name field. This will save the NEW Report with a different name AND keep the original report.

Once you have made the changes, click the Save Report Layout button to save the report.